



FAQ

Frequently asked questions

Mode "ON" missing





Wi-Fi

Mode "ON" missing

Question:

MyChron5 doesn't show Wi-Fi mode: "ON". Why?

Answer:

ON option has been removed due to the karting international rules that do not admit a radio DataStream output when the vehicle is racing.

AUTO mode switches Wi-Fi on when the vehicle is stopped and turns it off when vehicle speed exceeds 10 km/h.