

## Fast Sefi8lo communication protocol

Channels received by AIM loggers connected to Fast Sefi8lo ECU are:

<b>ID</b>	<b>CHANNEL NAME</b>	<b>FUNCTION</b>
ECU_1	FAST_RPM	RPM
ECU_2	FAST_MAP	Manifold air pressure
ECU_3	FAST_TPS	Throttle position sensor
ECU_4	FAST_PWR_ADDER_S	Power adder stage
ECU_5	FAST_ADVANCE	Spark advance
ECU_6	FAST_INJT	Injection time
ECU_7	FAST_BATTVOLT	Battery voltage
ECU_8	FAST_PWR_ADDER_E	Power adder enable
ECU_9	FAST_AIR_TEMP	Air temperature
ECU_10	FAST_PWR_ADDER_R	Power adder retard
ECU_11	FAST_ECT	Engine cooling temperature
ECU_12	FAST_UEGOS	Wideband sensor diagnostic value
ECU_13	FAST_AFR	Air/fuel ratio
ECU_14	FAST_02_CORR	