



## Installation guide

# Kit AiM Solo/SoloDL for BMW S 1000 RR

Release 1.03

---



# Kit AiM Solo/SoloDL for BMW S 1000 RR

## Installation guide

Fig. 1/6

Screw the rubber loose piece on the bolt inserting the distance piece

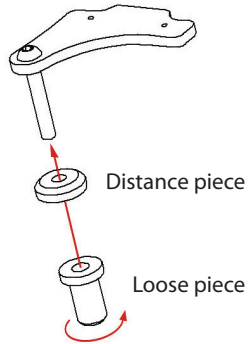


Fig. 2/6

Fix Solo bracket to the adapter bracket for BMW using the two countersunk screws

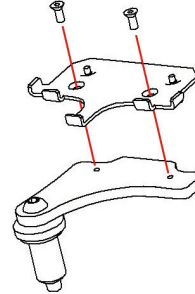


Fig. 3/6

Hook Solo to its bracket

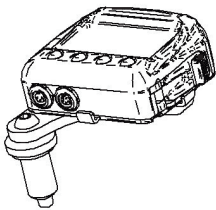


Fig. 4/6

Fix Solo to its bracket using the screws you find on the rear of the same bracket

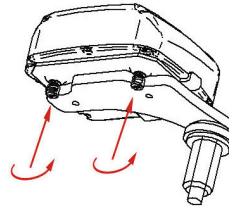


Fig. 5/6

Insert the loose piece in the handlebar hinge until the distance piece abuts the hinge

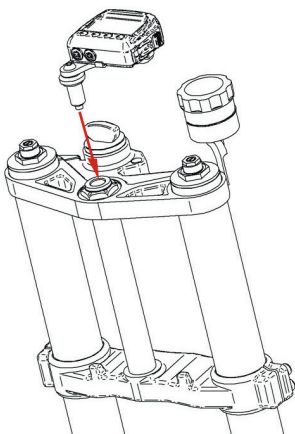


Fig. 6/6

Brake liquid pan

Screw the central screw on the hinge so that this last grips and is well fixed

If necessary unscrew and replace the brake liquid pan

